

## **OCIO** **QUICK SETUP INSTRUCTIONS**

1. When the power is switched on, a serial number will appear, you will need to remember the last two digits to gain access to the OCIO system
2. Hold down the **ENT** button, and press **CANC** button then let go
3. The OCIO will ask for a pin number, enter the last two digits of the serial number. (this can be done by using the scroll buttons on the front face)
4. The OCIO will display unit? This is factory set as **litres/ millimetres**. To change this to **gallons/ inches** scroll up/down, and press enter when you reach your desired measurement.
5. The OCIO will now read **TANK?** If you press **ENT**, you will be asked **TANK SHAPE A**. you will need to put in the tank shape by scrolling through the menu.
6. **A** = Cylindrical vertical tank
7. **B** = Cylindrical horizontal tank
8. **C** = Rectangular tank
9. **NONE** = This will only show the contents in height i.e. Millimetres / Inches
10. **EXAMPLE:** - A rectangular tank measuring **2500mm** High x **2500mm** Wide x **6000mm** Long
11. When in **TANK?** Choose shape "**C**".
12. The OCIO will read **TANK SHAPE C HEIGHT 0000**. Scroll up/down to reach the number '**2**' and press **ENT**, this will proceed to the next digit, again Scroll up/down to reach the number '**5**' then press **ENT**, the next two digits will be '**0**' so press **ENT** twice. The height is now set to **2500mm**.
13. The screen will change to **TANK SHAPE C WIDTH 00000**. The first digit is a '**0**' so press **ENT**, scroll up/down to reach the number '**2**' press **ENT**, this will proceed to the next digit, again Scroll up/down to reach the number '**5**' then press **ENT**, the next two digits will be '**0**' so press **ENT** twice. The width is now set to **2500mm**.
14. The screen will now change to **TANK SHAPE C DEPTH 00000**. The first digit is a '**0**' so press **ENT**, scroll up/down to reach the number '**6**' press **ENT**, this will proceed to the next digit, again Scroll up/down to reach the number '**0**' then press **ENT**, the next two digits will be '**0**' so press **ENT** twice. The width is now set to **6000mm**.

**NB:-The maximum height of the tank cannot exceed 4000mm.**

**When entering the sizes of the tank please note that the height has 4 digits, but the width and depth will have 5 digits**

**PLEASE REFER TO MANUAL FOR FURTHER INFORMATION**